

 
Fixture Silver Conduit (4pk)

Old Hinge and Silver Conduit Removal:

Unscrew the set screws from each end and pull out the damaged hinge wire and silver conduit.
Save the set screws for re-installation.

New Silver Conduit and Hinge Wire Installation

1) Install the set screw into one end of the fixture and tighten until flush with fixture.



2) Flatten fixture. Insert the precut Silver Conduit until it reaches the set screw.



3) Cut the new Hinge Wire (EXP-FXRS) 3/4" (19MM) shorter than the total length of the fixture.



4) Insert the Hinge Wire through the Silver Conduit until it reaches the set screw.



Note: **Do Not** flex the fixture until the Hinge Wire is completely installed!

5) Install a set screw at opposite end to secure the Hinge Wire and Silver Conduit.

